

Important Safety Information

⚠ WARNING

Do not dispose of batteries in a fire. They will vent fumes and may explode.

Failure to observe this warning could result in severe injury from harmful fumes or burns from flying debris.

⚠ CAUTION

Do not allow anything to contact the battery terminals.

- Do not immerse the batteries in liquid. Liquid may create a short circuit and damage the battery. If batteries are immersed, contact your service center for proper handling.
- Do not place the battery into a pocket, tool pouch, or tool box with conductive objects. Conductive objects may create a short circuit and damage the battery.
- Do not place a battery on moist ground or grass. Moisture may create a short circuit and damage the battery.

Failure to observe these precautions may result in injury or property damage.


⚠ CAUTION

- Do not store the battery at more than 122 °F (50 °C) or less than -4 °F (-20 °C). Damage to the battery can result.
- Do not use another manufacturer's charger. Other manufacturers' chargers may overcharge and damage the battery.
- Do not attempt to open the battery. It contains no user-serviceable parts.

Failure to observe these precautions may result in injury or property damage.

Operating Instructions

Charging time: 40 minutes

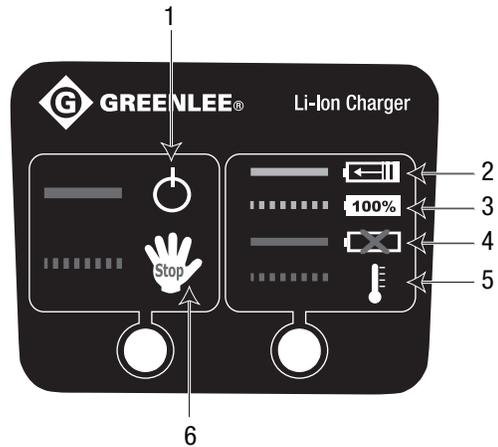

1. Charger is plugged into socket.
2. Battery is charging.
3. Battery is fully charged.
4. Battery is defective.
5. Battery is too hot or too cold.
6. Charger is defective.

⚠ CAUTION

Remove the battery before unplugging the charger from the receptacle to prevent the battery from discharging and potentially burning up.

Failure to observe this precaution may result in injury and property damage.

Warranty

The warranty for this unit is two years if operated according to its intended use. Excluded are damages that can be related to overload or inappropriate treatment.