

GVF 610 Visible Fault Locator Operation & Service

- Operation

Power – To turn the GVF610 on, depress the PWR button.
To turn the GVF610 off, press the button again.

Optical Output – The GVF610 is factory calibrated @ less than 1 mW and is equipped with a 2.5mm universal connector output.

AVOID LOOKING DIRECTLY AT ANY OPTICAL PORT.

2Hz Output – To modulate the GVF610 @ 2Hz, place the slide switch in the 2Hz position.

- Service

Low Battery condition exists when the **LOW BAT** LED flashes in CW mode.

GVF610 operates from a long life CR 2, 3V Lithium Battery.

Calibration / Repair – Call Greenlee +44 (0) 1633 627710 or visit <http://minifibretools.greenlee.com>



GVF 610 Visible Fault Locator Operation & Service

- Operation

Power – To turn the GVF610 on, depress the PWR button.
To turn the GVF610 off, press the button again.

Optical Output – The GVF610 is factory calibrated @ less than 1 mW and is equipped with a 2.5mm universal connector output.

AVOID LOOKING DIRECTLY AT ANY OPTICAL PORT.

2Hz Output – To modulate the GVF610 @ 2Hz, place the slide switch in the 2Hz position.

- Service

Low Battery condition exists when the **LOW BAT** LED flashes in CW mode.

GVF610 operates from a long life CR 2, 3V Lithium Battery.

Calibration / Repair – Call Greenlee +44 (0) 1633 627710 or visit <http://minifibretools.greenlee.com>



GVF 610 Visible Fault Locator Operation & Service

- Operation

Power – To turn the GVF610 on, depress the PWR button.
To turn the GVF610 off, press the button again.

Optical Output – The GVF610 is factory calibrated @ less than 1 mW and is equipped with a 2.5mm universal connector output.

AVOID LOOKING DIRECTLY AT ANY OPTICAL PORT.

2Hz Output – To modulate the GVF610 @ 2Hz, place the slide switch in the 2Hz position.

- Service

Low Battery condition exists when the **LOW BAT** LED flashes in CW mode.

GVF610 operates from a long life CR 2, 3V Lithium Battery.

Calibration / Repair – Call Greenlee +44 (0) 1633 627710 or visit <http://minifibretools.greenlee.com>



GVF 610 Visible Fault Locator Operation & Service

- Operation

Power – To turn the GVF610 on, depress the PWR button.
To turn the GVF610 off, press the button again.

Optical Output – The GVF610 is factory calibrated @ less than 1 mW and is equipped with a 2.5mm universal connector output.

AVOID LOOKING DIRECTLY AT ANY OPTICAL PORT.

2Hz Output – To modulate the GVF610 @ 2Hz, place the slide switch in the 2Hz position.

- Service

Low Battery condition exists when the **LOW BAT** LED flashes in CW mode.

GVF610 operates from a long life CR 2, 3V Lithium Battery.

Calibration / Repair – Call Greenlee +44 (0) 1633 627710 or visit <http://minifibretools.greenlee.com>

